 



Instruction Manual

Cordles Blower

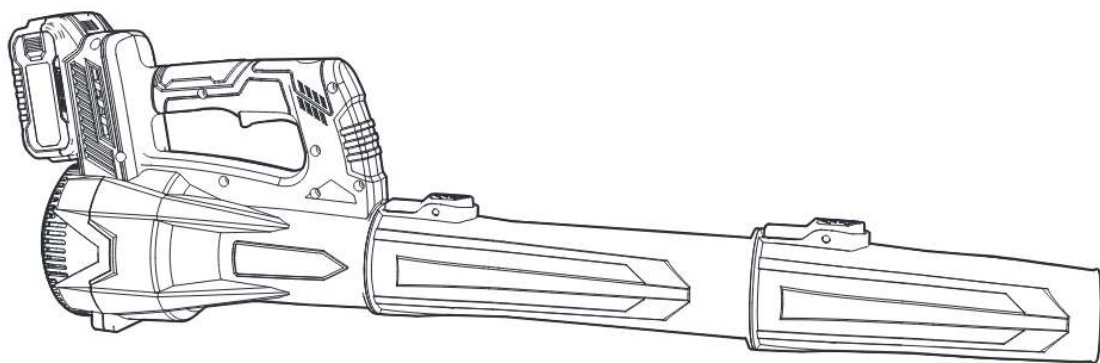

Thank you for choosing this product. To ensure your safety during use, please read the manual carefully before operation and keep it for future reference.

 PRODUCT SPECIFICATIONS

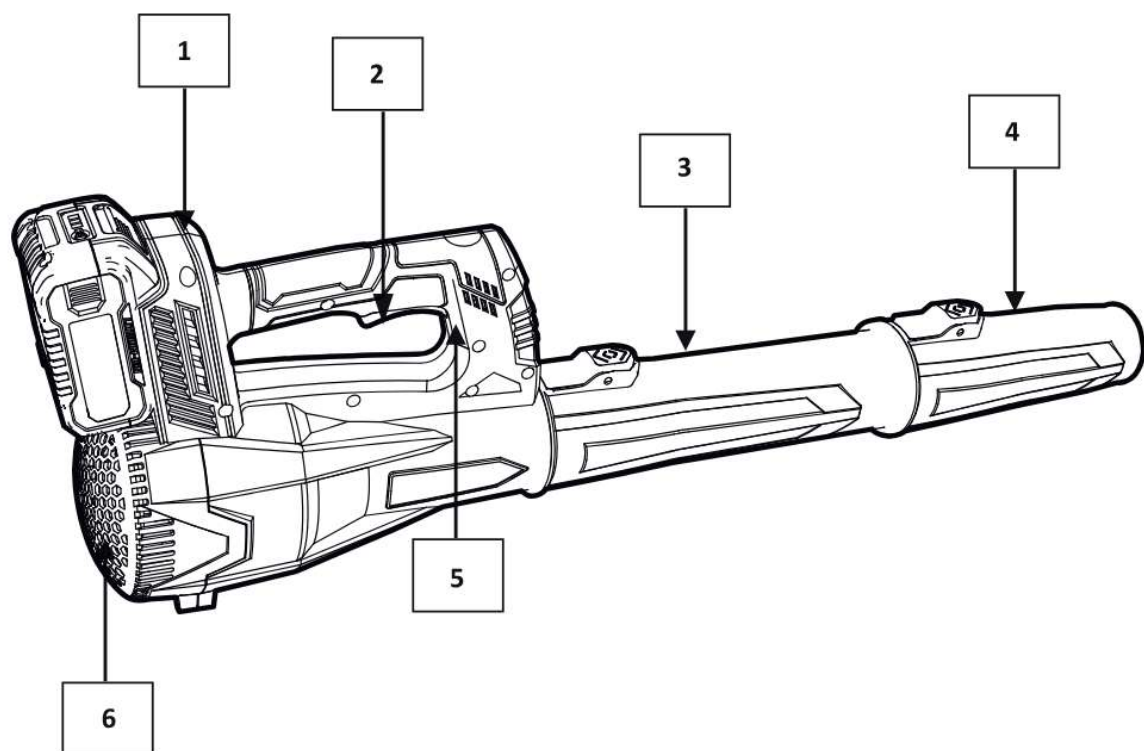

1. Main handle	4. Blower tube
2. Switch trigger	5. Air intake
3. Axial fan blower outlet	6. Bracket

General safety instructions for power tools

WARNING

Before starting up the machine, it is important to have read and understood these instructions and to follow them carefully. The instructions are for your own safety and that of others. They allow you to have a long and trouble-free use of your machine.

Children, persons with limited physical, sensory or mental abilities, or insufficient experience and knowledge or persons who are not familiar with the instructions must never be allowed to use the machine. Children are not allowed to play with the machine. Cleaning and user maintenance must not be carried out by children.

IMPORTANT READ CAREFULLY BEFORE USE KEEP FOR FUTURE REFERENCE

1) instruction

- a) Read the instructions carefully. Be familiar with the controls and proper use of the machine.
- b) Never allow children or persons unfamiliar with these instructions to use the machine. Local regulations can limit the age of the operator.
- c) The operator is responsible for any accidents or hazards caused to others or property.

2) Preparation

- a) Use ear protection and protective goggles and wear them during the entire time the machine is in use.
- b) Always wear sturdy shoes and long trousers when operating the machine. Do not operate the machine barefoot or with open sandals. Avoid wearing loose fitting clothes or clothes with dangling strings or ties.
- c) The operator is responsible for any accidents or hazards caused to others or property.
- d) Operate the machine in a recommended position and only on a firm, level surface.
- e) Do not operate the machine on a paved or gravel surface where the ejected material could cause injury.
- f) Always perform a visual inspection prior to use to ensure that the bolts and other fasteners are secure, that the housing is undamaged, and that the guards and screens are in place. Replace worn or damaged components in sets to maintain balance. Replace damaged or illegible

labels.

- g) Never operate the machine when people, especially children, or animals are nearby.

3) operation

- a) If the machine strikes any foreign objects or should start making any unusual noise or vibration, immediately switch off the machine to stop it. Remove the battery cartridge from the machine and inspect the machine for damage before restarting and operating the machine. If the machine is damaged, Please contact us by email service@steelitetool.com
- b) Do not allow processed material to accumulate in the ejection zone, as this may prevent proper ejection and cause re-introduction of material through the feed opening.
- c) Switch off the machine and remove the battery if the machine becomes clogged before clearing it of debris.
- d) Never operate the machine with defective protective machines or screens or without safety machines.
- e) Do not transport the machine while the energy source is running.
- f) Stop the machine and remove the battery. Make sure all moving parts have stopped completely
 - whenever you leave the machine unattended,
 - before clearing a blockage or blocked ducts,
 - before checking, cleaning or other work on the machine.



Always maintain balance and a safe stance on slopes. Walk, never run.

Do not touch any moving dangerous parts until the machine has been disconnected from the

power supply and the moving dangerous parts have come to a complete standstill.
Never use the machine with damaged protective machines or without safety machines such as the fall arrest machine.

⚠ WARNING:

NEVER operate the machine in poor weather, especially during lightning.

Keep the air inlets free from foreign objects. It is recommended that you only operate the machine at reasonable times - not early in the morning or late at night when people may be disturbed.

Use the machine only in daylight or in good artificial light.

1) Maintenance and storage

- a) If the machine is stopped for service, inspection, storage, or changing accessories, turn off the power source, remove the battery and ensure that all moving parts have completely stopped. Allow the machine to cool down before machine inspections, adjustments, etc. Maintain the with care and keep it clean.
- b) Keep the machine in a dry place and out of the reach of children.
- c) Always allow the machine to cool down before storage.
- d) Replace worn or damaged parts for safety reasons. Use only original spare parts and accessories.
- f) Never try to bypass the interlocking function of the protective device.

Read the instructions for use before charging.

- a) Protect the charger from rain and moisture. The penetration of water into the device increases the risk of electric shock.
- b) Use only chargers from the manufacturer. The use of chargers other than those designed by the manufacturer can result in a fire hazard.
- c) Do not charge any other batteries with the included charger. The charger is only suitable for charging lithium-ion batteries with a certain nominal voltage. Charging batteries that are not suitable for the device can create a risk of fire and explosion.
- d) Keep the charger clean. Contamination can create a risk of electric shock.
- e) Check the charger, cable and plug each time you use the device. Never use chargers with defective parts. Never open the charger and refrain from repairs to the charger yourself. Never use the charger with defective parts. Have the charger repaired only by a qualified and authorized person. Damaged chargers, cables and plugs increase the risk of electric shock.
- f) Never use the device in the immediate vicinity of flammable materials (paper, rubbish, etc.). In this way the risk of fire due to overheating can

be avoided.

- g) If the charger is used improperly, battery fluid can leak. It is imperative that you avoid any contact with the battery fluid. If you accidentally come into contact with battery fluid, rinse the affected area thoroughly. If battery fluid has come into contact with the eyes, consult a doctor. Battery fluid can cause skin irritation or burns.
- h) Never open the charger. This can prevent the risk of electric shock.
- i) Protect the device against heat as well as continuous sunlight and fire. Risk of explosion.
- j) Never short-circuit the battery. Risk of explosion. In the event of improper use or damage, vapors can escape from the device. In case of complaints, provide fresh air and consult a doctor. Vapors can affect the respiratory tract.
- k) The charger must not be operated on a flammable surface (e.g. paper, textiles). There is a risk of fire due to the heating that occurs during charging.
- l) If the power cord of this device is damaged, must need the manufacturer to replace it or the customer service or a similarly qualified person in order to avoid hazards.
- m) **ATTENTION!** Only children aged 8 and over should be allowed to use the battery charger. Adequate instruction should be given to enable the child to use the battery charger in a safe manner and it should be made clear that it is not a toy and should not be played with.
- n) Instruct the child not to charge non-rechargeable batteries because of the risk of explosion and not to attempt to do so.
- o) The battery charger must be checked regularly for damage, especially the cable, the plug and the housing. If the battery charger is damaged, it should not be used until it has been repaired.

Additional safety requirements for charger

Safety instructions for the battery

- a) Do not open the battery, as this may cause short circuits.
- b) Protect the battery from heat sources (e.g., prolonged sunlight), fire, water, and moisture. There is a risk of explosion.
- c) Do not short-circuit the battery. There is a risk of explosion.
- d) If the battery is damaged or used improperly, vapors may escape. Ventilate the area immediately and seek medical attention if symptoms occur. Inhaled vapors may cause respiratory irritation.
- e) If the battery is defective, liquid can escape and come into contact with surrounding components. Check all affected parts. Clean

thoroughly with a dry cloth, or replace them if necessary.

- f) Use the battery only with the machine. In this way the battery can be protected against dangerous overload.
- g) Use only original batteries. If different batteries are used, such as imitation batteries, reconditioned batteries or batteries from other brands, there is a risk of injury and property damage from exploding batteries.
- h) Store the battery in environments between 10°C and 25°C. Avoid leaving it in vehicles where temperatures may exceed this range.

Additional safety requirements for batteries

1. The battery is not pre-charged upon purchase. Fully charge it before initial use. The battery must be charged before using the tool for the first time.
2. The charge level of the battery drops even if it is not used. Regular charging, for example every four to six months, is therefore recommended.
3. Make sure that the battery is never completely discharged. This can cause damage.
4. Prompt charging of the battery contributes to a long service life. You need to charge the battery if you notice that the performance of the cordless tool is decreasing.
5. Avoid contact with leaking batteries. In the event of accidental contact, wash the affected skin area with soap and water. If you get battery acid in your eyes, flush them with clean water for at least ten minutes and see a doctor immediately. If skin contacts leaking fluid, rinse immediately with water for 10 minutes. Neutralize residual acid on surfaces using a weak base like baking soda solution.
6. Make sure that the battery contacts do not come into contact with other metal objects such as nails or screws. There is a risk of short circuits!
7. The battery becomes hot with heavy use. Allow the battery to cool below 40°C before recharging.

Operational Safety Guidelines



Before operation, thoroughly inspect all device components and ensure you understand its controls. Always verify the emergency stop function is accessible. Improper use may result in severe injury.

- Age Restrictions: Do not allow children to operate this device. Comply with local minimum age laws. Untrained individuals must not use the device.
- Lighting Conditions: Operate only in daylight or under bright, shadow-free artificial lighting (≥500 lux recommended).
- Hazard Awareness: Maintain a 5-meter safety zone from open windows, children, pets, or fragile

objects. Cease operation immediately if others approach.

Power-On Position: Never activate the device unless

- it is in the upright, stable position shown in the assembly diagram.
- Airflow Direction: Avoid directing the airflow toward people, animals, or fragile objects. High-pressure jets may cause eye or ear injuries.
- Environmental Awareness: Continuously scan your workspace for hidden hazards (e.g., uneven terrain, debris) that may be obscured by device noise.

Make sure you have a secure footing when working, especially on slopes.

- Walk at a walking pace, do not run.
- Carefully inspect the area to be cleaned and remove all wires, stones, cans and other foreign objects.
- Keep fingers and feet away from the pipe opening and impeller. There is a risk of injury.
- Only use the device when it is fully assembled.
- Only use replacement parts and accessories that are supplied and recommended by our service center.
- Power Down Immediately When:
 - Leaving the device unattended
 - Performing maintenance or accessory changes
 - Experiencing abnormal vibrations or impacts (e.g., hitting rocks)
 - Transporting between locations

Emergency Response Protocol

a) Situational Awareness: Continuously monitor your environment during use to anticipate hazards. Quick intervention can prevent escalation.

b) Malfunction Handling: If abnormal operation occurs: Power off immediately and remove battery/disconnect power.

Contact authorized service technicians for inspection.

Do NOT resume use until repairs are certified complete.

Unavoidable Hazards

While this power tool complies with safety standards, prolonged or intensive use may still expose operators to the following inherent risks due to its functional design:

- Lung damage if an appropriate protective mask is not worn.
- Hearing damage if adequate hearing protection is not worn.
- Health damage from hand-arm vibrations if the machine is used over a long period of time and is not properly operated and maintained

WARNING!

ELECTROMAGNETIC INTERFERENCE (EMI)

This tool emits EMI complying with IEC 62233. However, implanted medical devices (pacemakers, insulin pumps, etc.) may malfunction if within 30 cm of the operating unit.

Users with implants **MUST**:

- 1.Consult their physician and implant manufacturer prior to first use;
- 2.Maintain a minimum 50 cm distance from the motor housing during operation;
- 3.Discontinue use immediately if experiencing dizziness or irregular device behavior.










Symbol Legend

Symbols in the operating instructions





The function of the control units can be found in the following descriptions

 Danger sign with information on preventing personal injury or damage to property

Pictograms on the device

	Attention: Read the operating instructions thoroughly before use.		Attention! Read the operating instructions carefully.
	Risk of injury from ejected debris!		Rotating impeller hazard. Keep hands and tools clear during operation.
	Do not use or store the device in wet conditions.		Wear protective glasses
	Dispose of electrical devices through approved e-waste recycling channels.		Wear protective earmuffs
	Complies with EU standards (CE marked)		


Symbols on the battery:


	Read the operating instructions carefully before use.		Electrical appliances must not be disposed of with household waste
	Do not dispose of batteries in trash, fire, or water.		Avoid prolonged heavy-duty battery use. Avoid direct sunlight and do not place on radiators (max. 50°C).


Intended Use

The cordless leaf blower is designed for gathering leaves and light garden debris (e.g., grass clippings), particularly in hard-to-reach areas. the product is intended exclusively for private use and is not suitable for commercial,craft or industrial use.

All non-specified uses constitute misuse. [Manufacturer Name] shall not be liable for injuries, property damage, or consequential losses arising from unauthorized modifications or non-compliant operation.

 Do not expose the battery to extreme conditions such as heat and shock. There is a risk of injury from leaking electrolyte solution! In the event of eye-skin contact, rinse the affected areas with water or a neutralizing agent (e.g., baking soda solution) and consult a doctor

 Only charge the battery in dry rooms. The outside of the battery must be clean and dry before you connect the charger. There is a risk of injury from electrocution hazard.


 Use only the original charger provided. Make sure that the device is not charged **Do not** leave the device continuously charging beyond **5 hours**. The battery and the device could be damaged and you use unnecessary power if you charge them for a longer period of time. The guarantee expires in the event of an overload

- Fully charge the battery to 100% before initial use to activate cell balancing. Do not charge the battery briefly
- several times in a row. Recharge the battery if the device runs too slowly.
- A significantly reduced operating time despite charging indicates that the battery is used up and needs to be replaced. Only use an original replacement battery that you can obtain from customer service.
- In any case, observe the applicable safety instructions as well as regulations and notes on protection
- Defects resulting from improper handling are not covered by the guarantee

Recharge the Battery

WARNING! Switch off the device and wait for the blades to fully stop.
Let a freshly discharged battery cool down for approximately 15 minutes before inserting it into the charger.
Press and hold the button on the battery to pull it out. The battery is removed and as shown in Fig.3

Working with the device

 Only use the device with the blowpipe attached!

- You get the best result when using the cordless leaf blower with a distance to the ground of 5-10 cm.
- Direct the air duct away from you. Be careful not to propel heavy debris and cause injury or property damage.
- Before blowing, use a broom or rake to loosen any leaves stuck to the ground.
- In very dry conditions, lightly moisten the surface to reduce the amount of dust.

Check the charge status of the battery

The charge status indicator shows the charge status of the battery when the device starts

LED LIGHT DISPLAY STATUS	CHARGING STATUS
Solid red	Charging in progress
Red unlit	Standby (awaiting charge)
Solid green	Fully charged

FOR THE CHARGER

1. Use only the input voltage specified on the charger label.
2. Before charging, read the instructions carefully.
3. Before charging the battery, Always connect the battery pack to the charger before plugging into mains.
After the battery has been fully charged disconnect the power supply after removing the battery pack from the charger.
4. This device is for indoor use only. Never expose to liquids.
Any damage resulting from non-compliant operation voids the warranty.
5. The charger charges the following battery packs.


Battery charger	Battery pack	
Model number.	Model	Volt
DC842	DC851/DC852	100-240V AC,50-60HZ
▪ Do not charge non-rechargeable batteries with this device.		

6. SAVE THESE INSTRUCTIONS. This manual contains important safety information and instructions for using the battery charger.
7. CAUTION: Risk of explosion if battery is improperly replaced. Replace **only with identical battery models**
8. Do not expose the charger to rain, snow Do not use the power

tools in damp or wet locations.

9. Using an “battery or accessory” that is not manufactured or recommended by the charger manufacturer could result in fire, electric shock or personal injury.
10. To reduce the risk of damage to the cord and plug, pull the plug and not the cord when disconnecting the charger from the mains.
11. Make sure that the cable is routed in such a way that it cannot be stepped on, tripped over, damaged or pulled in any other way.
12. Do not use the charger with a damaged cord or plug. In the event of any damage, have them replaced by authorized technicians immediately.
13. Do not use the charger if it has been subjected to impact, dropped or damaged in any way, take it to an authorized customer service center.
14. Do not disassemble. For repairs, contact authorized service centers. Tampering voids warranty and may cause fire.
15. To reduce the risk of electric shock, unplug the charger from the wall socket before servicing or cleaning it.
16. Charging should be permitted only when the battery pack is between 32 ° F (0 ° C) and 95 ° F (35 ° C).
17. The ventilation of the charger must never be covered or closed with obstructing materials** (cloth, paper, etc.)
18. The charger works with normal household electricity. Do not use any other mains voltage!
19. **WARNING:** The parts inside the charger are live and create a risk of electric shock. Do not insert anything into the charger connections!
20. Unplug the charger immediately if you notice smoke or flames!
21. Keep the charger away from children!

 MOUNTING

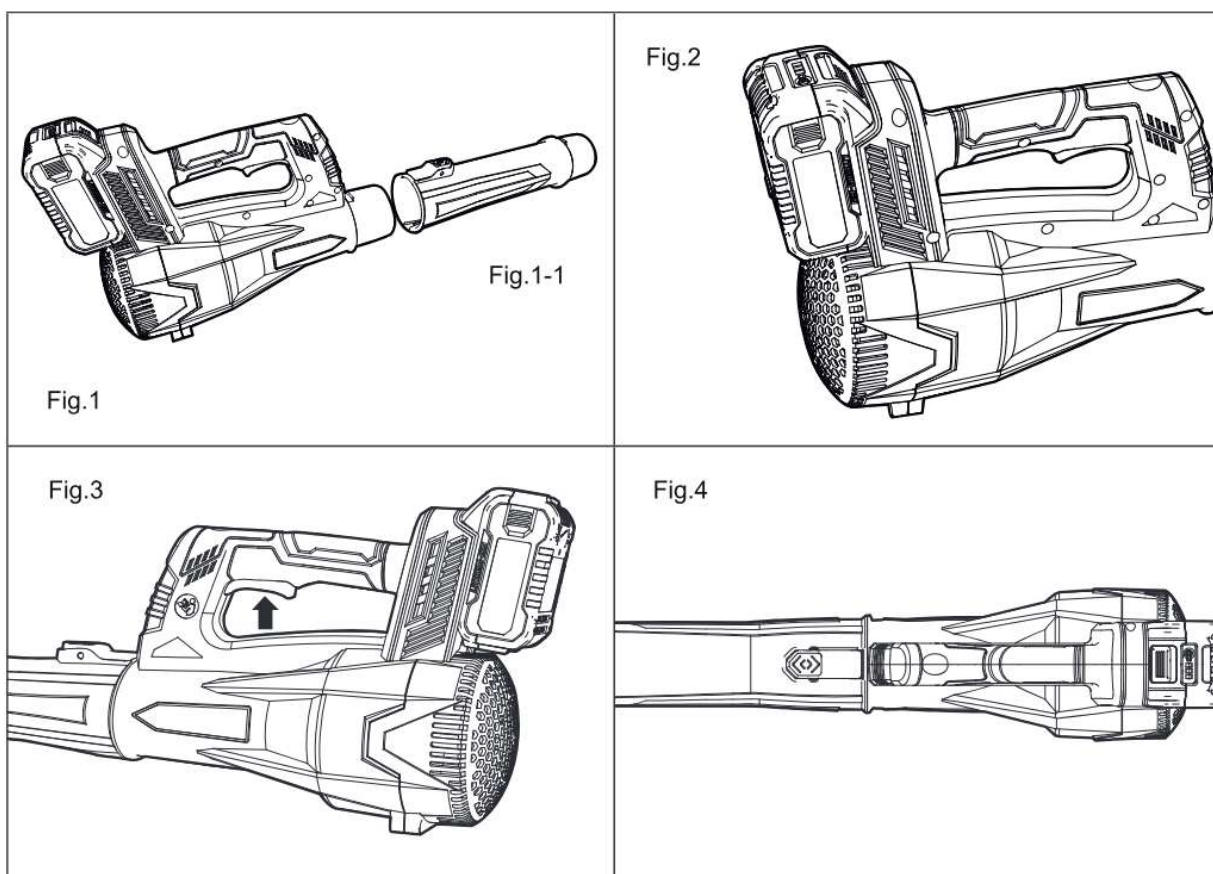

ASSMBLE THE TUBE (Abb.1)

NOTE: Before assembling the tube, make sure that the battery is not inserted in the product and that the power switch is in the - off position.

- Align blowpipe nozzle with air duct grooves
- Turn the blowpipe counterclockwise to lock it into the groove of the air duct, and the blowpipe is fixed.

INSERT THE BATTERY(Fig.2)

- Press and hold the button to insert the battery into the holder

SWITCH ON / OFF (Fig.3)

Push the switch trigger up to turn on the cordless leaf blower.

Release the switch to turn off the cordless leaf blower

If you want to increase the speed, press the trigger first, then press the Speed level control button after the engine has started. At this point the speed of the machine increased rapidly

The battery is low voltage protection voltage protection

Operation

- Grip the main handle with your dominant hand and stabilize the auxiliary grip with the other hand. Sweep the floor with the lower pipe 5-10 cm above the floor or side to side.
 - Slowly move the fan carriage forward and hold the accumulated debris in front of you.
- Most dry blowers are designed for low speeds rather than high speeds.
High speed blowing is best for heavier items like large debris or gravel.

CLEANING, MAINTENANCE AND STORAGE



WARNING! To avoid serious injuries, always switch off and remove the battery and clear debris from air vents before cleaning or maintenance.



Have repairs and maintenance work that are not described in these instructions carried out by our service center. Use only original parts



Switch off the device and remove the battery from the device before starting any work. Perform the following cleaning and maintenance work regularly. This ensures a long and reliable use

CLEANING

The device do not spray or submerge the device in water. There is a risk of electric shock. Keep the ventilation slots, motor housing and handles of the device clean. Clean the ventilation slots, motor housing and handles using a damp cloth or soft brush.

- Keep the ventilation slots free of dust and debris to prevent the cordless leaf blower from overheating.
- Clean the blower regularly with a soft cloth, preferably every time you use it. If the dirt doesn't come out, use a soft cloth dampened with soapy water.
- Never use solvents such as gasoline, alcohol, and ammonia water to clean the blower unit. These solvents can damage the plastic parts

MAINTENANCE

The cordless leaf blower was developed in such a way that it can be requires minimal routine maintenance but demands strict adherence to cleaning protocols.

Maintenance. There are no user serviceable parts and continued safety operation depends on maintenance and regular cleaning. The cordless leaf blower should only be repaired by an authorized service center.

STORAGE

A. Remove the battery packs.

B. Keep the cordless leaf blower in a stable and safe place out of the reach of children.

C. Keep the device in a dry, dust-free place and out of the reach of children.

Remove the battery from the device if it is to be stored for a long time (e.g. over the winter). Only store the battery when it is partially charged. The state of charge should be 40-60% during a longer storage period. During a longer storage period, check the charge status of the battery every 4-6 months and recharge if necessary.

Store the battery between 10°C to 25°C . Avoid extreme cold or heat during storage so that the battery does not lose performance.

AFTER SALE SERVICE:

- Refund or Replacement



Cordlesstool@hotmail.com

- TechnicalSupport



9495021738