

TROUBLESHOOTING		
PROBLEM	CAUSE	SOLUTION
The appliance is not working	Appliance not plugged in	Insert the plug into the wall outlet
	Wall outlet not energized	Check fused and circuit breaker
Motor rotates very slowly or does not rotate	Too much food in the container/Motor is overloaded	Remove some food, shake ingredients in container to redistribute and restart cycle.
	Consistency is too thick	Add some liquid and restart cycle
	Food residue built-up in the coupling	Unplug the appliance, disassemble the blade attachment and clean the coupling using a small brush
Food not fully blended	Ingredients too large	Remove the ingredients and cut them into smaller pieces
	Too much food in the container	Remove some foods, shake the container to redistribute the ingredients and then restart cycle

TECHNICAL DATA
Rated voltage: 120V 60Hz
Rated power input: 180W


cETLus
Intertek

TECHNICAL DATA
Rated voltage: AC 220V 50-60Hz
Rated power input: 250W



Manufacturer Name: WanT Kitchen & Home Appliances
Manufacturer Address : No.2, South MingGuang Road, MaoShan Industrial Zone, JiangShan Town, YinZhou District, Ningbo, China

the appliance for a maximum of 3 consecutive cycles, after which, allow the appliance to cool down for at least 10 minutes before the next use. Do not exceed the maximum operation cycles.

- Once the ingredients have reached the desired consistency, release the low speed button I (1) to switch off the appliance.
- Withdraw the blade attachment (5) from the container (ill. h).
- If necessary, gently shake the container to re-distribute the ingredients.
- Disconnect the plug (7) from the wall outlet (ill. i).
- Remove the blade attachment (5) from the motor unit (1) by turning it clockwise(IIj).
- Pour the blended food into a suitable container, when necessary.

HINTS AND TIPS

- Always allow frozen ingredient to defrost. Frozen ingredients are hard and can damage the appliance.
- Addingredients into the container first before adding solid ingredients to ensure an even blend
- Cut ingredients into smaller pieces to allow quicker blending.
- Forbest results, cut solid ingredients into approximately 1/2 inch (1.3cm) piece
- Operate the appliance for only as long as needed to reach the right consistency,,
- Do not operate the appliance continuously for more than 1 minute. Do not operate the appliance continuously for more than 15 seconds without load. Allow the appliance at least 3 minutes to cool down between operation cycles.
- Operate the appliance for a maximum of 3 consecutive cycles, after which, allow the appliance to cool down for at least 10 minutes before the next use. Do not exceed the maximum operation cycles.
- Do not use the appliance to blend hot liquids or foods.
- Do not use with ice.
- Do not use with dry ingredients only.
- It is recommended to clean all accessories used after each use.

18. Never pull on the cord to disconnect the appliance from the wall outlet; instead, grasp the plug and pull on the plug.

19. Do not use appliance for other than intended use.

20. Do not blend ice or dry ingredients,

21. Let the appliance cool completely before putting away or storing.

22. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts involving a risk of electric shock.

ADDITIONAL SAFEGUARDS

This appliance is for HOUSEHOLD USE ONLY


WARNING:

-DO NOT OPERATE THIS APPLIANCE, IF THE POWER CORD SHOWS DAMAGE OR IF APPLIANCE WORKS INTERMITTENTLY OR STOPS WORKING ENTIRELY.

- A short power-supply cord is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- Longer extension cords are available and may be used if care is exercised in their use.
- If a long detachable power-supply cord or extension cord is used:
 - The marked electrical rating of the cord or extension cord should be at least as great as the electrical rating of the appliance.
 - If the appliance is of the grounded type, the extension cord should be a grounding 3-wire cord; and
 - The longer cord should be arranged so that it does not drape over the countertop or table top where it can be pulled on by children or ripped over unintentionally.

Want

Hand Blender
WT-99A-5

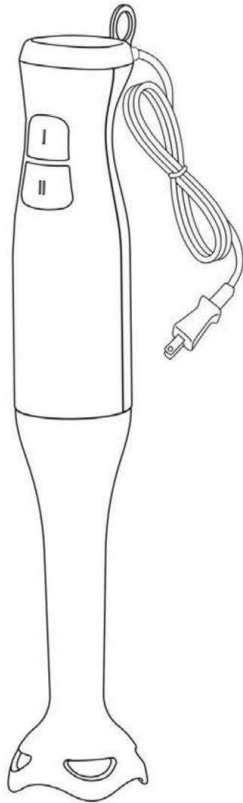


IMPORTANT SAFEGUARDS

When using electric appliances, basic safety precautions should always be followed, including the following

- Read all instructions before use**
- Do not touch hot surfaces. Use handles or knobs.
- WARNING**-to protect against electric shock, fire and personal injury:
 - do not immerse cord, plug or motor unit in water or other liquids;
 - do not immerse the appliance or any electrical components in water or any other liquids.
- This appliance should not be used by children and care should be taken when used near children.
- Unplug from wall outlet when not in use. before putting on or taking off parts, and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Avoid contacting moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or is dropped or damaged in any manner. Call our toll-free customer assistance number for information on examination, repair, or electrical or mechanical adjustment.
- The use of accessory attachments not recommended or sold by the appliance manufacturer may result in fire, electric shock or injuries to persons
- Do not use outdoors or in a damp area.
- Do not let power cord hang over edge of table or counter.
- Do not let power cord touch hot surfaces, including the stove. Do not place on or near a hot gas or electric burner or in a heated oven.
- When mixing liquids, use a tall container or make small quantities at a time to reduce spillage.
- Keep hands and utensils out of the container while blending to prevent the possibility of severe injury to persons or damage to the unit. A scraper may be used but must be used only when the unit is not running.
- Blades are sharp, Handle carefully.
- Never leave the appliance unattended during use.
- To switch off the appliance, release the button and remove plug from wall outlet.
- Do not place the appliance close to the edge of the countertop.

PARTS

- Low speed button I
- High speed button II
- Power cord with plug
- Motor unit
- Coupling
- Blade attachment
- Blades

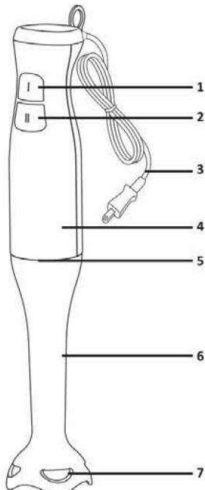

OPERATION

Before first use

- Remove all packaging materials, labels and/or stickers from your appliance.
- Check package to verify all contents are included and undamaged. Do not operate the appliance if the contents are incomplete or appear damaged.

Danger of suffocation!

- Packaging materials are not toys. Always keep plastic bags, foils and foam parts away from babies and children. Packaging material could block airways and mouth and prevent breathing.
- Clean the appliance thoroughly before using for the first time (See Cleaning and Maintenance).

Using the appliance

This appliance can be used for blending of cooked or raw vegetables and fruits. This appliance is not intended for chopping hard foods, such as seeds or frozen foods, blending hot liquids or foods or to be used with ice.

NOTE:

- Place the appliance on a clean, flat and stable surface.
- Combine the ingredients in a suitable tall container (ill. b).

CLEANING AND MAINTENANCE

Proper maintenance will ensure many years of service from your appliance. Clean the appliance after every use. The appliance contains no user serviceable parts and requires little maintenance. Leave any servicing or repairs to qualified personnel.

WARNING:

- Always disconnect the plug (7) from the wall outlet before cleaning. Allow all parts of the appliance to cool down completely.

NOTE:

- Do not immerse the power cord with plug (7) and motor unit (3) into water or any other liquid (ill. k). Do not use abrasive cleaners, steel wool or scouring pads (ill. l). Dry all parts thoroughly after cleaning, before using or storing the appliance. Ensure that no water enters the motor unit (3).
- The blades (6) are very sharp. Clean carefully. Danger of injuries!
- Clean the coupling (4) using a small brush.

- Only the blades (6) and blade attachment (5) can be immersed in water.
- After cleaning, place the blade attachment (5) in an upright position with blades (6) at the bottom to ensure that water can be drained out
- Clean the motor unit (3) with a slightly damp, soft cloth.

NOTE:

- Peel or core any fruits or vegetables and cut them into small chunks. Cut solid food into small pieces not larger than 1/2 inch.
- When blending dry ingredients, add water to allow an easier and smoother blending operation. Do not blend dry ingredients only.

WARNING:

- The blades (6) are very sharp. Always handle the blade attachment (5) with care. Do not touch blades (6) as this may cause injuries (ill. c).
- Do not overfill the container to avoid spilling or food entering the motor unit (3).
- Only use accessories recommended by the manufacturer. Do not attach any other attachments onto the appliance.
- Always inspect attachments before each use. Do not use cracked, bent, or damaged attachments.

- Attach the blade attachment(5) by aligning the coupling (4) onto the motor unit (3) and secure it by turning it counterclockwise until counterclockwise until locked in proper position (ill.d).
- Connect the plug(7) into a wall outlet(ill.e)
- Immerse the blade attachment(5) into the container with the prepared ingredients.
- Press and hold the low speed button I(1) to start blending operation (ill.f). Use the high speed button(2) for higher speed blending.

Note:

- Ensure there is enough liquid in the container to at least cover the blades.
- Slowly move the appliance through the food, upward, downward and sideways to ensure the ingredients are all blended equally (ill.g).
- To ensure even blending, release the low speed button I(1) to switch off the appliance. Withdraw the blade attachment (5) from the container after a few seconds and gently shake the container to mix the ingredients.
- Do not press both low speed button (1) and high speed button II(2) at the same time.

WARNING:

- Do not operate the appliance continuously for more than 1 minute. Do not operate the appliance continuously for more than 15 seconds without load. Allow the appliance at least 3 minutes to cool down between operation cycles. Operate