

# Safety instructions and operation manual for charged electric mower

Before using this product, be sure to read through and fully understand this manual carefully before using, maintaining and maintaining the machine.

We reserve the right to change product specifications according to product improvement needs.

## — . Safety matters

1. Prohibit children from using this equipment
2. Use equipment in the following environments: sufficient light, no one else in the mowing area
3. Grounds with steel pipes and many stones are forbidden to be used in rainy days.
4. Check the equipment carefully before use. If it is found that the equipment is damaged or worn out, first replace the spare parts and then use the equipment.
5. Don't wear loose clothes when using. At the same time, hair, hands and feet are far away from the running parts of the equipment.
6. It is forbidden to expose the equipment to rainy days or humid places so as to prevent water from entering batteries and motors from causing damage.
9. The power supply must be disconnected when unattended equipment, obstacle clearance, abnormal vibration of equipment and blade replacement are needed. Wait until the blade stops working completely before doing other operations on the



Model: YS-810      charging time: 30/1 hour  
Material: Steel pipe/aluminium pipe, ABS engineering plastics  
idle speed: 18000 rpm  
Battery: 12VOLT/21VOLT  
lithium battery no-load time: about 2 hours/3 hours  
Standard accessories: batteries, chargers, blades

**! This machine is suitable for family use, only suitable for mowing grass in garden lawn.**

## 二 . Operational Guidelines

1. Push the button down to adjust the length of the telescopic rod.



### 2. Sheath Installation

3. Angle adjustment of motor case head: press the circular button to adjust the shell angle:



4. Installation of blade: the slot used to fix the blade on the top of the lawn mower, insert the blade into the slot, align the screw hole, and turn into the slot. Screw can

