Table saw parts list

- Seven-level speed regulating power supply
- 2 Table saw body
- (3) Saw blade
- Metal backer
- 5 Baffle connecting rod
- 6 Backer hand-tightening nut
- Backer Screw
- 8 Baffle gasket
- Bezel thumbscrew

0

- (III) Allen wrench
- 1 Angle ruler
- Baffle

Power installation



Power cord and speed adaptor



Power cord jack



Connection diagram



Power connection dia

Installation and replacement of saw blade



Saw blade installation position





Remove the screw and saw blade clamp Put the saw blade in from above



Install the saw blade clamp



Tighten the screws with an Allen wrench to fix

- ▲ 1.When need to replace the saw blade or do anything action for functional or before using, please keep the supply plug disconnected.
- 2.The machine can only work with one fonction each times you'd like to use it. please take down the accessary after finishing the working.
- 3.After sawing, if you don't want to use it, please put down the baffle to prevent damage to the saw blade. Note: please pay attention to this guard when using other functions next time. If you don't remove the saw blade, please don't use it.

Angle ruler installation



Push the angle ruler into the




Turn the red knob to adjust the angle

Backer and baffle installation



Place the metal backing at the position shown

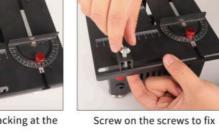



Install the baffle connecting shaft



Screw on the screws to fix



Screw on the screws to fix



The installation is complete

Drill chuck installation







Installation location

Install the drill chuck

Tighten with an Allen wrench

Sanding disc installation



Installation location

Tighten with drill chuck screws

Install sandpaper

Flexible shaft installation



Tighten the connecting rod of the flexible shaft with an Allen wrench On the soft shaft



Installation location



Install the drill chuck



Tighten with a hexagon wrench from the bottom of the machine

- ▲ 1.When need to replace the saw blade or do anything action for functional or before using, please keep the supply plug disconnected.
- 2.The machine can only work with one fonction each times you'd like to use it. please take down the accessary after finishing the working.
- 3.After sawing, if you don't want to use it, please put down the baffle to prevent damage to the saw blade. Note: please pay attention to this guard when using other functions next time. If you don't remove the saw blade, please don't use it.