

Super Bass Speaker

DZ-017



Product Instruction Manual

Thank you for choosing our products and I hope you enjoy your musical journey

• SAFETY INSTRUCTION

PLEASE READ THIS MANUAL CAREFULLY BEFORE USE AND KEEP IT FOR FUTURE REFERENCE

- 01.Keep away from heat, sun exposure and sharp objects.
- 02.Stay away from the open fire.
- 03.Don't insert any metal objects. Avoid short circuit.
- 04.Don't repair the product by yourself, but contact the authorized repairer.
- 05.Avoid products from getting caught in the rain,Spray.
- 06.If the product is overheated. Damaged or fell into liquid. Please stop using.
- 07.Use products according to standards and regulations.

• PACKAGING ACCESSORIES


- 01.DZ-006 Audio*1
- 02.TYPE-C charging cable*1
- 03.Product description*1
04. Lanyard*1

• INTERNAL BATTERY

- 01.Built-in rechargeable battery takes 2-3 hours to complete the charging and discharge cycle.
- 02.Don't continue charging a fully charged battery. Overcharging will shorten the battery life.
- 03.If the full load is placed, it may be a little lost.
- 04.Placing the product in a place that is overheated or too cold will shorten the product life.

• CHARGING FUNCTION

- 01.Plug in the TYPE-C charging cable and connect the charger at the other end.
- 02.The product's LED charging indicator light is always on in red, that is,the sound is charging normally.
03. Red light when the product is charging, blue light when fully charged

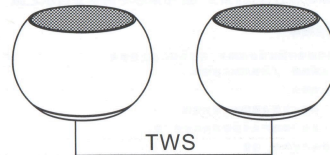

• OPERATION FUNCTION

- 1、 Long press the on/off button to turn on and off.
- 2、 sound interconnect function: at the same time will be two sets of audio power on, power on and take its One of the stereo continuously double-click on the on/off button to interconnect, and hear the After the tone indicates that the interconnection is successful, at this time the two stereos will be synchronized to play The two stereos will play songs synchronously at this time.

Remarks:

The volume of the audio and the previous song and the next song need to be debugged through the cell phone.

• TROUBLESHOOTING

| Failure phenomenon | Possible reasons | Solution |
|----------------------------|--|--|
| Unable to search Bluetooth | The battery is not powered off | Charge the audio |
| Unable to pair Bluetooth | The audio has been paired with another device and has not entered pairing mode | Turn off other paired devices Search again and pair |

• TECHNICAL SPECIFICATIONS

| | |
|------------------------------|---|
| Product Model | DZ-017 |
| Bluetooth Name | BT-017 |
| Bluetooth receiving distance | Straight line obstacle free 10m |
| Speaker Power | 3W |
| Battery capacity | 300mAh |
| Charging Interface | TYPE-C Interface |
| Charging duration | 3H |
| Working hours | Maximum volume ≥ 3H. (Note: The time will vary depending on the type of mobile phone and the actual situation) |

Thank you for your support!

FC CE RoHS

FCC Requirement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.