# 290/V80说明书,成品尺寸85x120,单面印刷,风琴折

## **Dynamic Jellyfish Aroma Diffuser**

#### INSTRUCTIONMANUAL




#### **USER MANUAL**

Thank you for purchasing this product, please read the instruction manual carefully before using this product

#### **Product specification**

Product name:Dynamic Jellyfish Aroma Diffuser Power supply: DC24V/650MA Product size:160x160x140MM Raw material:ABS+PP Origin:China Product model: V80 Net weight: 510G Water tank: 250ML Spray volume: 15-30ML/H Executive standard: GB 4706.1-2005 GB 4706.48-2009

#### Product diagram

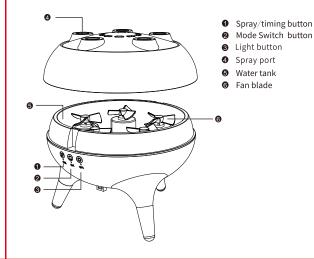

#### **Key Function**

Key 1	Short press the first time, bright golden light, regular spray circle, default no timing
	Short press a second time, bright golden light, direct spray
	Press it a third time to power off
	Press and hold the press for the first time in the power-on state, and the 4H indicator will turn off at a fixed time
	Press and hold for the second time, timed 8H shutdown, 8H indicator light
	Press and hold for the third time to cancel the timing, and the ON indicator lights up
Key 2	The button is valid when the device is powered on
	Short press the first time to enter the fixed spit circle spray mode
	Short press the second time to open the voice control mode, and the machine will spray in circles according to the size of the sound
Key 3	Short press to switch the lighting effect, the default golden light is turned on, in order: golden light/colorful breathing light/fixed color/colorful jump/light off

### Matters needing attention

- 1. Add water before using this product, and it is forbidden to use the humidification function in the case of water shortage;
- 2. When cleaning the product, please do not wash directly with a tap to avoid the possibility of product short circuit.
- It is recommended to use a meat cotton cloth to wipe:
- 3. Do not let children aged 0-6 use this product alone
- 4. It is forbidden to stand upside down if there is water in the water tank

#### Package contains

One humidifier, one instruction manual, Remote control, adapter